




Wireless Door/Window Sensor with Alarm

INSTALLATION


1. Remove the screw from the battery compartment cover.(fig.1)
2. Install an alkaline 9V battery.
3. Replace the battery cover and screw.
4. Mount the magnetic door/window sensor
Choose a suitable location, then use the template provided to mark location, drill holes and install anchors and screws. Place the unit over the screws and slide it down to secure in place. (fig.2)
5. Mount the magnetic wired piece to the door or window frame and another single piece to the door/window by using the double-side tapes (included) and aligned the 2 sensor pieces to be flushed and " ◀ " facing " ▶ " at no more than 1/4" apart as shown in (fig.3)
6. If you connect more than one sensor to the main unit, connect them in series as shown below. (Fig.4)

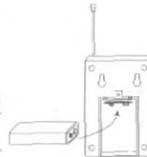


(Fig.1)



(Fig.2)

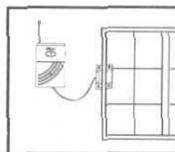

(Fig.3)

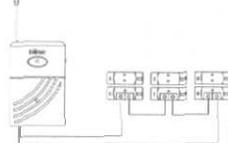

(Fig.4)

NOTE: After select a location, you should test the sensor transmitting range before mount it permanently, turn local alarm switch to OFF , turn the CHIME switch to ON of T015, T016 main unit or press HOME button of T018 main unit, then open/close the magnetic switch of door/window sensor to trigger, you will hear the main unit sounds "DING DONG" chime if signal is received successfully, if not, change location is required.

LEARNING CODE TO MAIN UNIT

The wireless door/window sensor compatible T015, T016, T018 main unit, must learn code to main unit then use, learn code operation see main unit manual.

OPERATION

After 60 seconds installed 9V battery, the unit will into standby mode. Once the door/window opened or the unit vibration will output wireless radio signal and LED flash, then sound alarm 3 seconds, you can turn switch select alarm sound on or off.

BATTERY LOW INDICATOR

When 9V battery goes low, the LED will light on 3 seconds and off 1 second, change a new alkaline 9V battery immediately, or the sensor might not detection properly.

Patent Pending
Trademark & Copyright Reserved



CE
Made in China
639-60000-000R



6 32291 60000 5



Wireless Door/Window Sensor with Alarm

- Detect Vibration or Door/Window Open Output Wireless radio signal and Activates Alarm
- Double Sensor --- Magnetic Sensor and Vibration Sensor
- 9V Battery Operation (Not Included)
- Low Power Consumption--- Long Battery Life
- Wireless RF Transmission Up to 300 Feet
- Battery Low Indicator LED
- Compatible with Additional Wire Magnetic Sensor



YEAR WARRANTY
1