




SWBCDVR Instruction Manual



- Full HD 1080p Video Quality
- Motion Activated Recording Mode
- AC Powered for Continuous Recording
- 8GB microSD Card Included
- Supports Up to 32GB
- Functioning USB 2.0 Charger
- Rapid Charge Capable

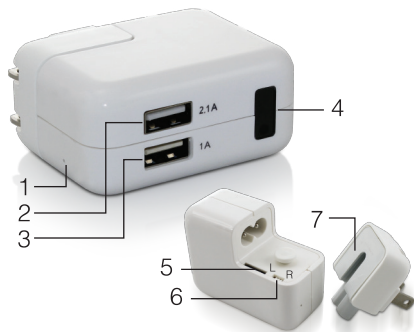

1. Indicator Light
2. Rapid Charge USB Port
3. Standard Charge USB Port
4. HD Camera
5. microSD Card Slot
6. Function Switch
7. AC Wall Plug

Operating Instructions

1. Continuous Video Recording
Insert microSD card, slide the Function Switch to the *left* (See Diagram #5), and plug into a standard wall outlet. A red light will stay lit for approximately 10 seconds, then blink 3 times. The device is now recording.
2. Motion Detected Recording
Insert microSD card, slide the Function Switch to the *right* (See Diagram #5), and plug into a standard wall outlet. A red light will stay lit for approximately 10 seconds, then blink 3 times. The device will begin recording when motion has been detected.
3. Viewing Recorded Video
Connect the included USB cable to the unit and your computer's USB port. Navigate to
A. Windows: My Computer/Removable Disk to view and save files.
B. Mac: Macintosh HD/Untitled to view and save files.
Note: Identifying the disk is dependent upon your system's configuration. If the disk is not available, please make sure the USB connection is secured properly.

4. Setting the Time Stamp
A. After connecting the device to the computer, open the mounted disk named either Removable Disk or Untitled.
B. Create a new plain text document and name it "timerset."
C. In the document, enter the current date using the following format (no spaces between numbers): 20151119040500 Y

2 0 1 5 1 1 1 9 0 4 0 5 0 0 Y
 YEAR MON. DAY HOUR MIN. SEC.

Important Information

1. Working Temperature: 32° to 104° Fahrenheit
2. Working Humidity: 20% to 80%. Do not use in damp working environment.
3. Device is not waterproof.
4. Do not use in direct sunlight as this may cause damage to the camera.
5. Use a clean, soft cloth to wipe the lens.
6. Keep away from strong magnets & high voltage.

Warranty Information

1. *Streetwise Security Products* extends a one year warranty to the SWBCDVR for defects in materials or workmanship, with the following exceptions:
 1. The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture, or loss of parts.
 2. The warranty will be voided if the unit has been opened or tampered with in any way (unless by an authorized dealer) or if any unauthorized replacement parts have been used.
2. NOTICE: Purchaser must check and abide by all local laws governing the possession and use of hidden DVRs. In addition, the DVR must only be used in a lawful manner.
4. Conditions of Sale: Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.
5. To Obtain Service: Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandise Authorization. The return unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.